

TOYO


ZERO-PHASE CURRENT TRANSFORMER



■ Zero Phase Current Transformer

The Zero Phase Current Transformer (ZCT) to be combined with the earth leakage relays consist of a core in magnetic sheet of very good magnetic qualities, which permits to detect fault currents even of very low value.

During installation, inside the zero phase current transformer all phase conductors and eventually the neutral conductor if existing, should pass through. **Attention! The earth conductor (PE) should NOT pass through the ZCT.**

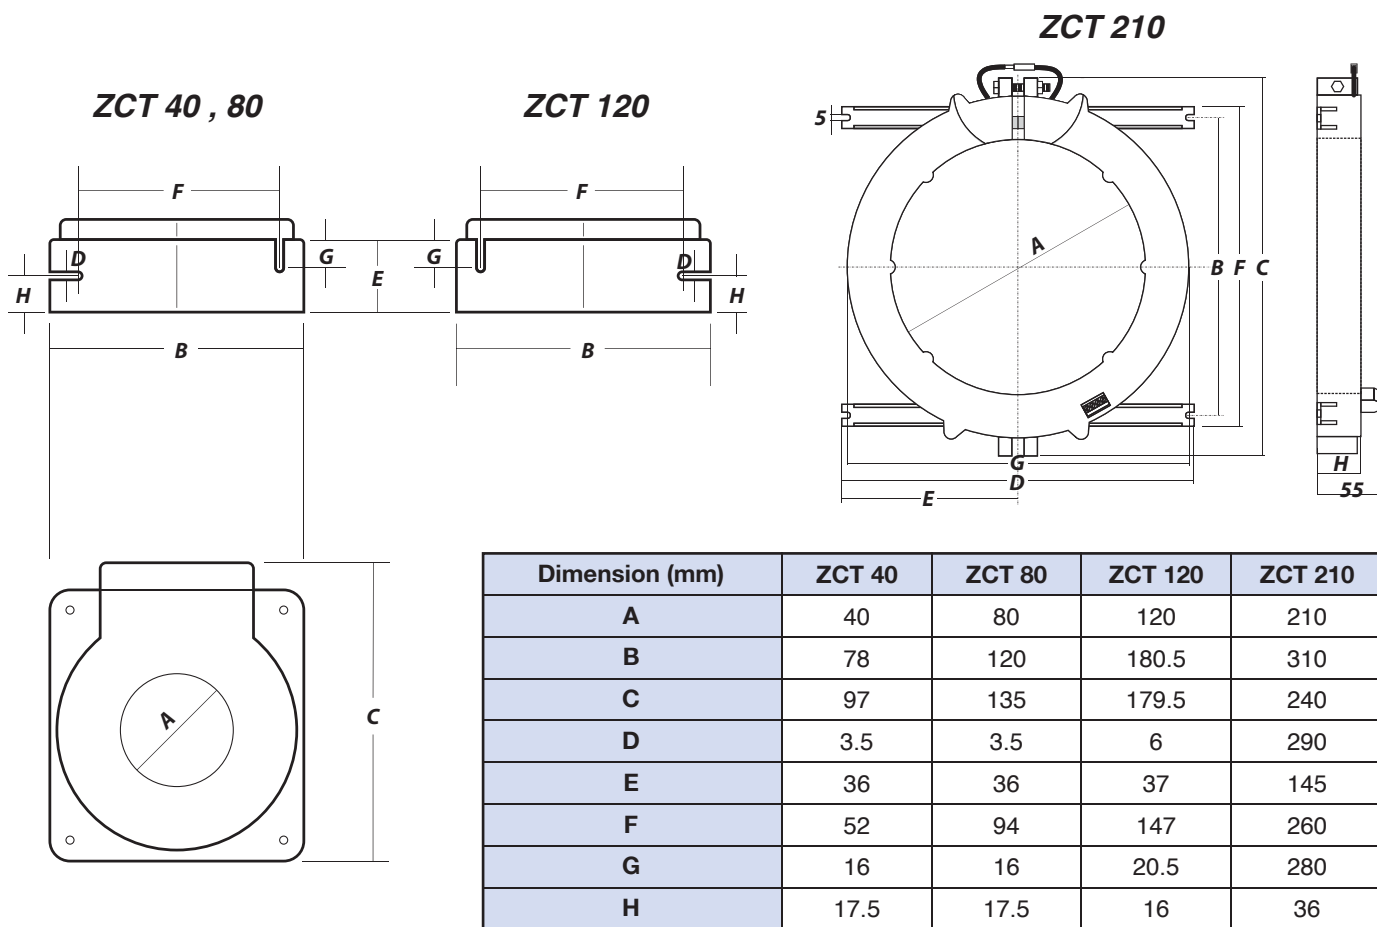

■ Ordering Information

Model	Description
ZCT- 40	40mm inner diameter
ZCT- 80	80mm inner diameter
ZCT- 120	120mm inner diameter
ZCT- 210	210mm inner diameter

普得企業股份有限公司

總 公 司：台北市內湖區行愛路 68 號 6 樓
 電 話：(02)8791-8588 傳 真：(02)8791-9588
 電 子 郵 件：toyotech@ms37.hinet.net
 網 址：www.toyotech.com.tw

台中辦事處：台中市文心路四段 200 號 10 樓之 2
 電 話：(04)2296-9388 傳 真：(04)2296-9386
 高雄辦事處：高雄市民生一路 56 號 15 樓之 6
 電 話：(07)227-2133 傳 真：(07)227-2173